



SNORKEL PRE CLEANER SERVICE INSTRUCTIONS

Unifilter's snorkel pre-cleaners should be washed out in **mineral turps only** and dried using an absorbent cloth.

Oil pre cleaner with Unifilter's "Filter Fix" oil. It is important that almost **all** of the filter oil is removed from the pre cleaner prior to fitting to the vehicle. The foam should be moist but never wet with filter oil.

Service intervals

Regular service intervals are subject to the conditions within which the vehicle operates. However, we recommend daily inspection of the pre cleaner or, if in convoy, then every few hours may be necessary.

The condition of the pre cleaner is an important indicator for service, which is when the red colour of the foam has disappeared and dust covers the inside of the pre cleaner foam.

WARNING

Unifilter's snorkel pre cleaners are not suitable for highway use. We recommend use only in dusty conditions.

UNIFILTER AUSTRALIA

1/35 Leighton Place, Hornsby NSW 2077, Australia

☎ (02) 9482 1792 📠 (02) 9482 1790

info@uniflow.com.au

www.unifilter.com.au