

UNI FILTER

02 HIGH PERFORMANCE AIR FILTERS RUSH

Unifilter foam air filter servicing guide.

Step by Step instructions.

Step 1. You will need “Unifilter Filter Fix” filter oil, “Unifilter Foam Filter Cleaner” (this is a citrus based cleaner) alternatively use Mineral Turpentine, Pressure spray bottle, 2 x servicing buckets, latex gloves, two cleaning rags, sealing grease (mineral based is the best to use)



Step 2. After putting on the latex gloves, pour the “Filter Cleaner” into the pressure spray bottle and spray the dirty filter both inside and out. Massage the cleaner through the filter.

Step 3. Rinse foam in clean bucket of water to remove the dirt. If the filter is still dirty repeat this step.



Step 4. After the filter is completely clean hang the filter up to dry. The filter needs to be 100% dry before re-oiling. If the filter is not completely dry the filter oil can hold the moisture in the foam and cause it to rot!



Step 5. Boil some water in a kettle, pour the hot water into a bucket and sit the bottle of Unifilter “Filter Fix” foam air filter oil in the hot water for a few minutes. (similar to a babies bottle) This warms the filter oil up and makes it easier to use.



Step 6. Once the filter is completely dry. Pour the warm filter oil over the filter. (Hold the filter over a clean bucket and completely cover the filter with filter oil) This allows you to pour all the excess oil back in the bottle. When you have covered the filter inside and out massage and squeeze the filter oil through the filter. Squeeze as much oil out of the filter as possible. **“Never ring the filter as it can cause it to go out of shape”**



Step 7. Wrap the filter tightly in an absorbent towel or cloth for 20 mins to draw any excess oil out of the filter.



Step 8. Smear some grease on the base of the sealing foam where it contacts the air box. “Mineral based high temperature bearing grease” is the best to use for this.



Step 9. The filter is now cleaned & re-oiled ready for use.

