


# UNIFILTER

## RAMPOD KIT INSTRUCTIONS

### 2002 TOYOTA COROLLA – MATRIX

Note – It is preferable to fit your RAMPOD kit when the motor is cold.

1. Remove air flow meter from air box.
2. Remove air box.
3. Clamp RAMPOD into intake hose.
4. Attach RAMPOD bracket to strut tower with the 6mm bolt provided or bolt the bracket to the air box mounting points.
5. Place air flow meter into the RAMPOD using the screws provided.
6. Use the cable ties provided to attach the throttle cable to the intake pipe.
7. Cable tie the vacuum line to the black canister behind the RAMPOD.
8. Check all nuts and bolts are tight and all plugs are plugged in.
9. You are now ready to start the engine.
10. ENJOY

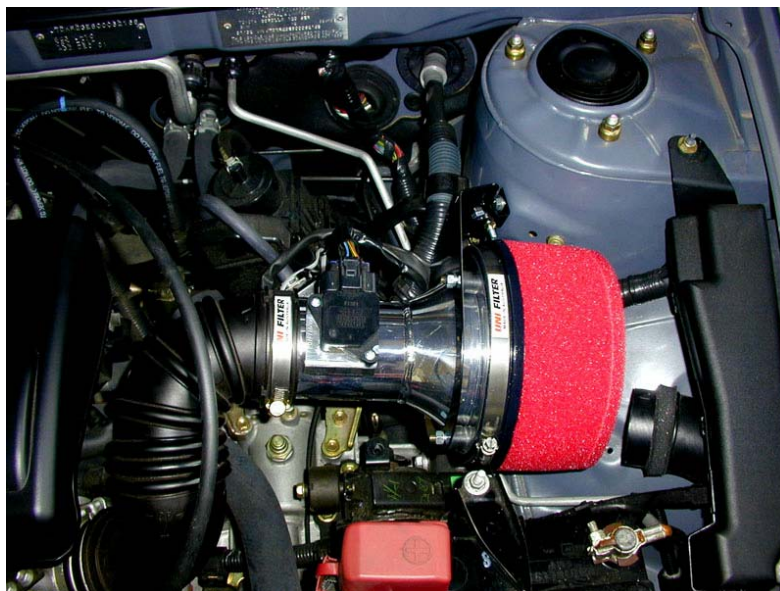

### UNIFILTER AUSTRALIA

1/35 Leighton Place, Hornsby NSW 2077, Australia

☎ +61 2 9482 1792, 📠 +61 2 9482 1790

Email: [info@uniflow.com.au](mailto:info@uniflow.com.au)

Web: [www.unifilter.com.au](http://www.unifilter.com.au)